



ergonomic products

K&A MANUFACTURING

6703 ZINSER ST., SCHOFIELD, WI 54476

PHONE: 800.298.4351 FAX: 866.882.9475


www.raproducts.com

VERSION DATED: 9/27/11

TOOLS REQUIRED FOR ASSEMBLY:

- CORDLESS DRILL
- #2 PHILLIPS HEAD DRIVER BIT
- 7/16" WRENCH

READ ALL THE INSTRUCTIONS BEFORE BEGINNING

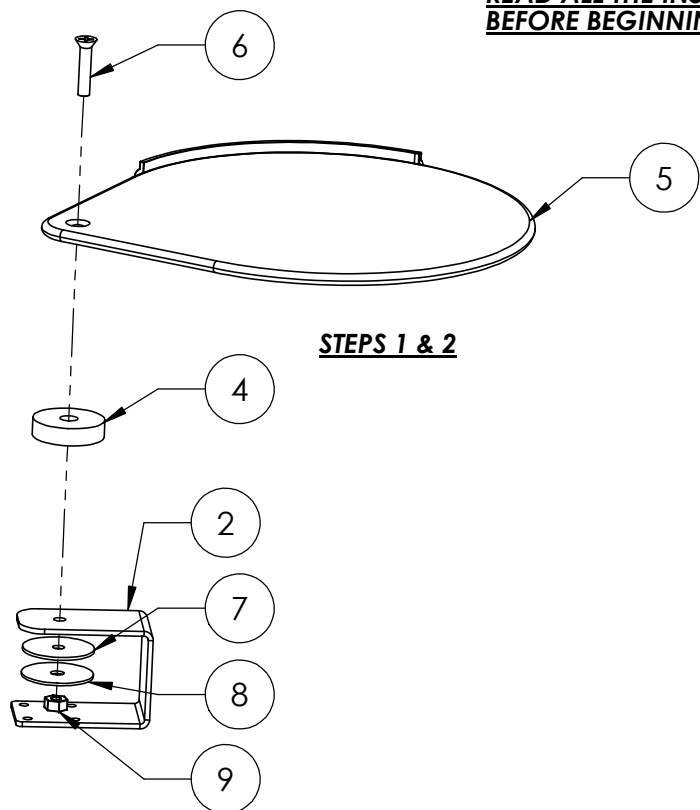


STEPS 1 & 2

MYRIAD™ KEYBOARD TRAY WITH 2000EM MOUSE TRAY OVER C-BRACKET INSTALLATION INSTRUCTIONS:

STEP 1: INSERT THE MACHINE SCREW **6** THROUGH THE MOUSE TRAY **5** FROM THE SIDE WITH THE COUNTERSUNK HOLE.

STEP 2: PLACE THE BLACK PLASTIC WASHER **4** ONTO THE MACHINE SCREW **6** AGAINST THE MOUSE TRAY **5**. NEXT PLACE THE MOUSE TRAY OVER C-BRACKET **2** ON THE MACHINE SCREW AGAINST THE PLASTIC WASHER. NEXT PLACE THE NYLON WASHER **7** AGAINST THE C-BRACKET, THEN THE FENDER WASHER **8** AGAINST THE NYLON WASHER. FINALLY THREAD THE REVERSE LOCK NUT **9** ONTO THE MACHINE SCREW. TIGHTEN IT SO THAT THE MOUSE TRAY WILL ROTATE BUT NOT SPIN FREELY.

STEP 3: ATTACH THE TRAY AND C-BRACKET ASSEMBLY TO THE BOTTOM OF THE MYRIAD™ KEYBOARD TRAY **1** USING (4) DRILL AND TAP SCREWS **3**.

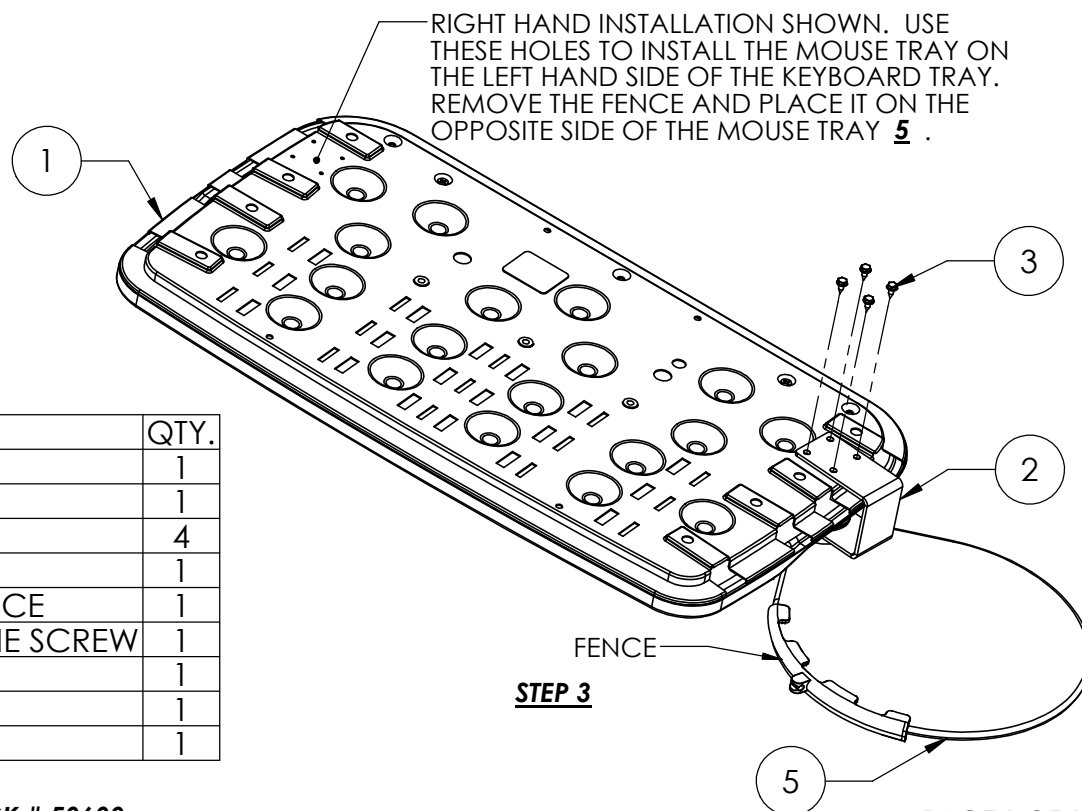

STEP 3

ITEM #	PART #	DESCRIPTION	QTY.
1	MRD	MYRIAD KEYBOARD TRAY	1
2	800445	MOUSE TRAY OVER C BRACKET	1
3	50805	6 x 3/8 DRILL AND TAP SCREW	4
4	50733	3/8 x 1 1/2 x 3/8 PLASTIC WASHER	1
5	2000EM	2000EM TEARDROP MOUSE TRAY WITH FENCE	1
6	50049	1/4-20 x 1 1/4 PHILLIPS FLAT HEAD MACHINE SCREW	1
7	50201	1/4 x 1 1/2 x 1/16 NYLON WASHER	1
8	50153	1/4 x 1 1/2 x 3/32 FENDER WASHER	1
9	52085	1/4-20 REVERSE LOCK NUT	1